



Installation / Installatie


Remove battery-compartment / Verwijder batterij-vak

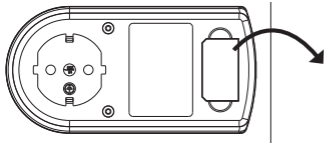


Remove plastic / Verwijder plastic

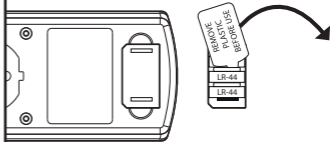


Return battery-compartment / Plaats batterijvak terug

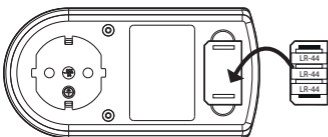

Insert EM-17 in outlet / Stop EM-17 in stopcontact

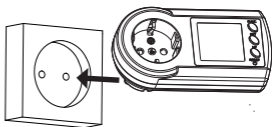


Plug device into EM-17 / Stop apparaat in EM-17

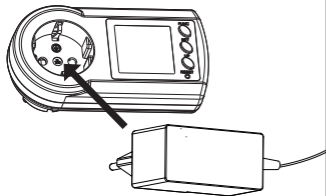

Change display / Weergave wijzigen

Switch between display of time, used voltage, ampere, watt, total energy usage in Kwh and, if set, total cost, cost in price block 1, cost in price block 2, frequency, power factor and the price per Kwh by tapping the FUNC-button.


Wissel tussen weergave van klok, gebruikt voltage, amperage, watt, energieverbruik in Kwh en - indien ingesteld - kosten, kosten in prijsblok 1, kosten in prijsblok 2, frequentie, factor en prijs per Kwh door kort te drukken op de FUNC-toets.

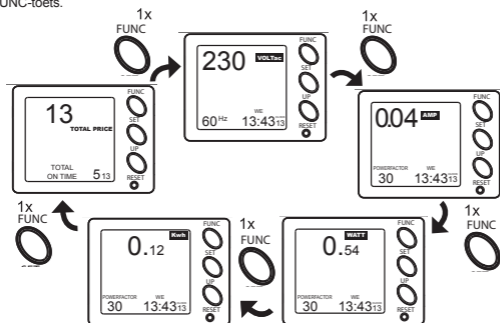

Set cost / Kosten instellen

Hold FUNC button for 3 sec. on the VOLT-ac screen to enter cost edit mode. In this mode, use SET-button to switch between the four digits, week day and ON time and adjust the selected digit with UP button. Make a second cost by pressing FUNC button once after setting the first cost.


Houd FUNC toets 3 sec. ingedrukt tijdens weergave van VOLT-ac om kosten per Kwh te bewerken. In deze stand, wissel tussen de vier getallen, weekdag en inschakeltijd van deze kosten met de SET-toets en druk op UP om het geselecteerde getal aan te passen. Druk eenmalig op de FUNC-toets na het instellen van de eerste kosten om een tweede tarief in te stellen.

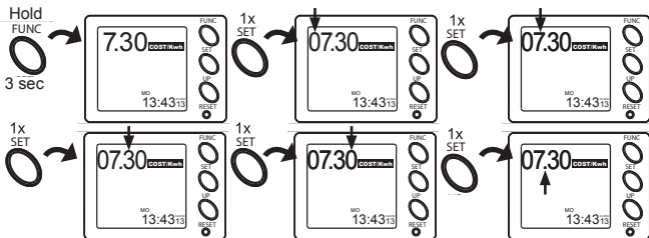

Set time and date / Tijd en datum instellen

In the main screen, press SET button once to enter time edit mode. In this mode, use UP-button to switch between days or adjust the selected. Press SET to move to the next digit to edit.


In het hoofdscherm, druk op de SET toets om de tijd aan te passen. In deze stand, gebruik UP om het geselecteerde getal aan te passen. Druk op SET om naar het volgende getal te gaan.

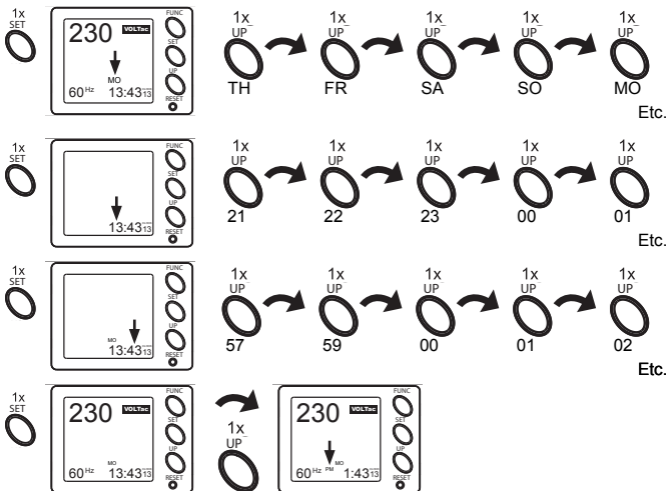

Reset

Remove from the power outlet and use a pin to press the small reset button to reset all clock settings and costs.

Haal uit het stopcontact en gebruik een pen of paperclip om de kleine reset-knop in te drukken en zo de klokinstellingen en kosten te resetten.

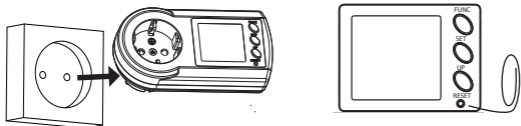

Alecto[®]

Service  Help 

 **WWW.ALECTO.NL**
SERVICE@ALECTO.NL

 **Hesdo, Australiëlaan 1**
5232 BB, 's-Hertogenbosch
The Netherlands

Declaration of Conformity:
The declaration of conformity is available at:
<http://DOC.hesdo.com/EM-17-DOC.pdf>